



Light Bar (Windshield)

Part No. J017


Fits: Jeep Wrangler JK 2007-2012

PARTS LIST:

Qty	Part Description	Qty	Part Description
1	Driver/Left Side Leg	2	8mm Lock Nuts
1	Passenger/Right Side Leg	2	2" Plastic caps for bottom of front legs
1	Cross Bar Light Mount	4	12mm Rubber Plug/Grommets
2	8mm x 65mm Button Head Allen Bolts Allen Bolts	4	Pre-Cut Foam Self-Stick Gaskets
4	8mm Flat Washers		

TOLL FREE SUPPORT: 866 638 4870

Install Time : 60 – 180 Minutes
(Professional Installation)
 Install Note :

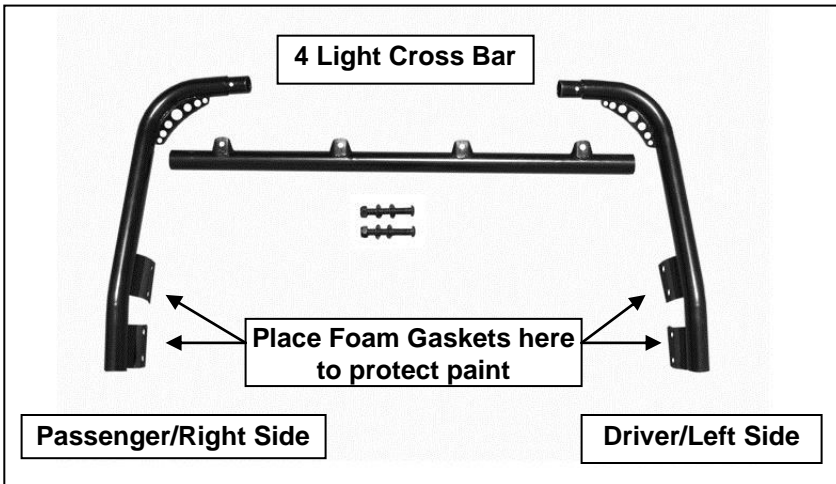


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION



INSTALLATION PROCEDURE

**** If you plan on running wiring internally through the tubes you should do so prior to assembly**

1. Peel, stick and trim the self sticking Foam Gaskets to the inside surface of the two mounting tabs on each support leg.
2. Remove the (4) factory outer windshield hinge bolts from the Passenger Side. Locate the Passenger Side Leg and attach it to the windshield hinge using the factory bolts removed in this step, **(Fig 1)**.

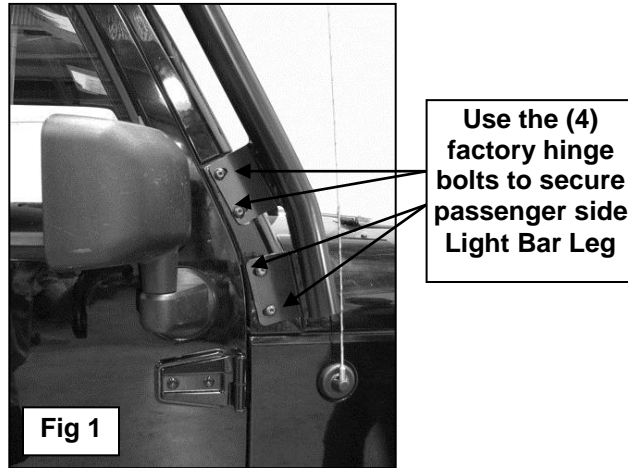

3. Slide the Driver Side Leg into the Cross Bar and lock into place with included (1) 8mm x 65mm Button Head Allen Bolt, (2) 8mm Flat Washers and (1) 8mm Nylock Nut. Only hand tight, do not fully tighten at this time, **(Fig 2)**.

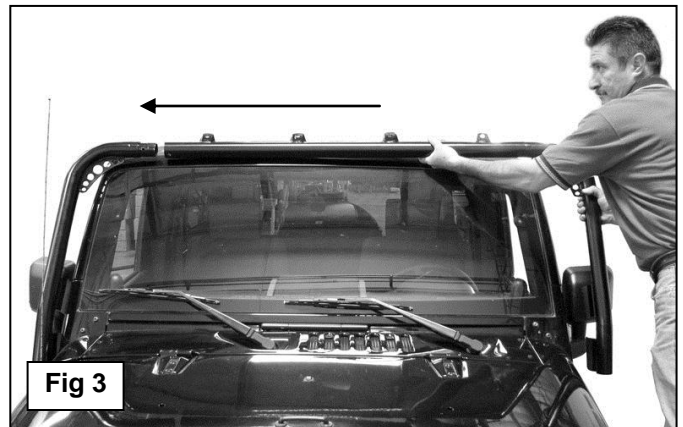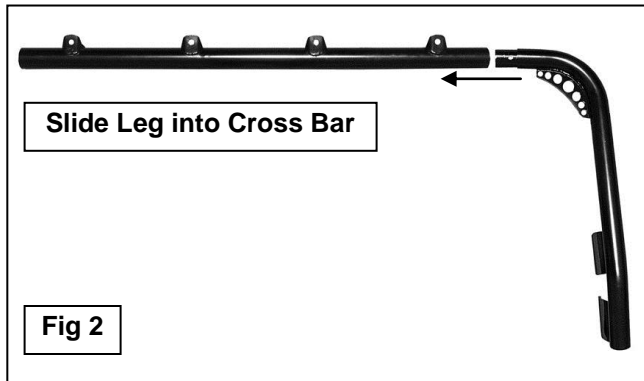

4. Remove the driver side (4) factory outer windshield hinge bolts. Carefully insert the cross bar and driver side leg into previously mounted passenger side leg, **(Fig 3, ABOVE)**. Align holes on the lower section of the Leg with holes on the windshield hinge. Secure Leg to vehicle using the factory bolts removed in this step, **(Fig 1)**. Snug tighten only at this time. Proceed to secure upper section of the Leg to Front Cross Bar using the included (1) 8mm x 65mm Allen Bolt, (2) 8mm Flat Washers, and (1) 8mm Nylock Nut, **(Fig 4)**. Do not fully tighten at this time.
5. If you are installing off road lights at this time, the cross bar can be rotated for better access by removing the (2) 8mm x 65mm Button Head Allen Bolts lock bolts and carefully rotating Cross Bar toward the front of the vehicle. **Remember:** Reinstall and tighten the (2) 8mm x 65mm Button Head Allen Bolts, (4) 8mm Flat Washers, and (2) 8mm Nylock Nuts once lights have been installed. Tighten all hardware at this time.
6. Do periodic inspections to the installation to make sure all hardware is secure and tight.



Driver's side and passenger's side installed

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Product.

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.