



Tail Light Guard (Wrap Round)

Part No. J026

Fits: Jeep Wrangler JK (Wrap around Style) 2007-2014

PARTS LIST:

Qty	Part Description	Qty	Part Description
2	Tail Light Guards	4	#4 x 45mm Sheet Metal Screws
8	Rubber Spacers	8	#5 Flat Washers
4	#5 x 50mm Sheet Metal Screws		

TOLL FREE SUPPORT: 866 638 4870

Install Time : 60 – 180 Minutes
(Professional Installation)

Install Note :


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION




INSTALLATION PROCEDURE

1. Remove the four screws holding the taillight lens to the housing, **(Figure 1)**. **NOTE:** Be careful as the two inner screws attach the complete taillight assembly to the vehicle. Pay attention to the size of the factory screws and their location.

Fig 1 (Driver Side Pictured)

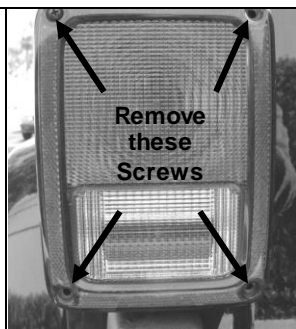

2. Line up the tabs on the Taillight Guard with the (4) screw holes. **IMPORTANT:** If required, make minor adjustments to the mounting tabs. **NOTE:** Cover the tabs with masking tape and gently bend into the proper position with pliers or an adjustable wrench.
3. Once properly adjusted and aligned, insert the four rubber spacers into the recesses in the taillight lens for the factory screws, (**Figures 2 & 3**).
4. **IMPORTANT:** The factory mounting holes and screws are two different sizes. Pay close attention to the size of the factory screws and their location. Use the correct size replacement screw to avoid damage to the tail light housing.
5. Install (2) of the smaller OD #4 X 45mm Sheet Metal Screws and #5 Flat Washers in the (2) inner positions. Use (2) of the larger #5 X 50mm Sheet Metal Screws and #5 Flat Washers in the (2) outer mounting holes. Insert each screw with Flat Washer through the mounting tab, the Rubber Spacer and into the tail light housing, (**Figures 2, 3 & 4**). Do not tighten at this time.

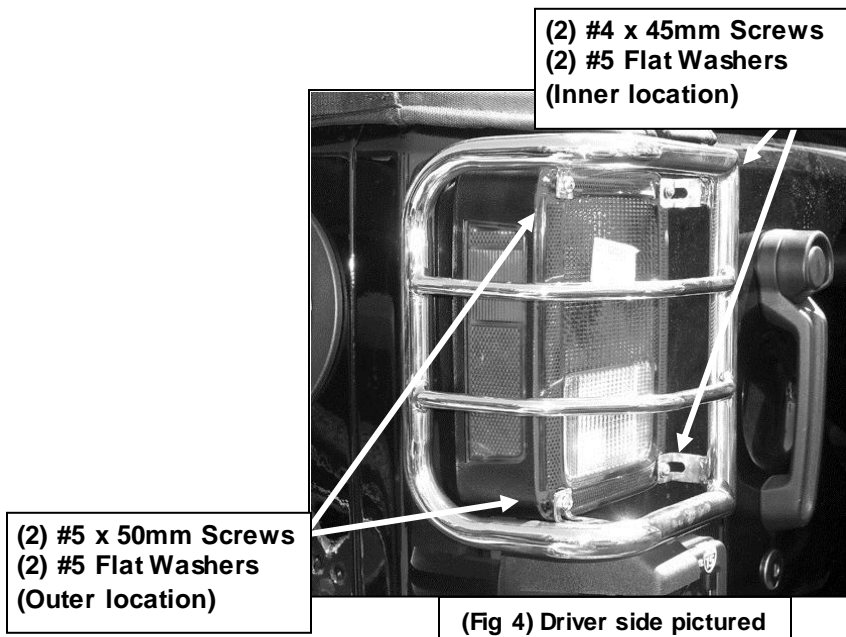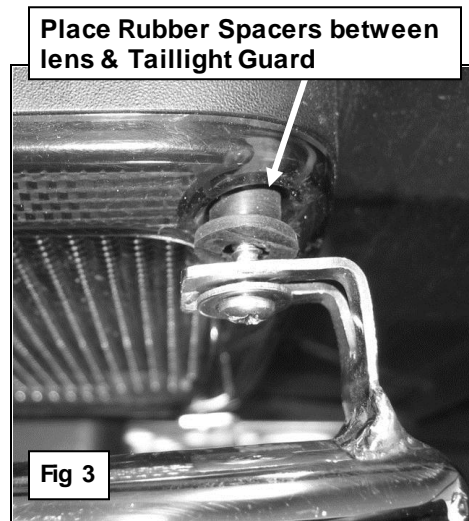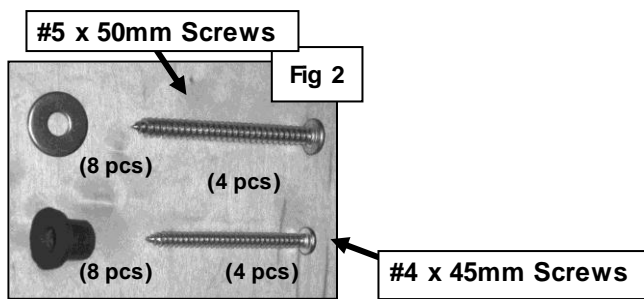

6. Align the Taillight Guard with the top of the lens and tighten the screws using the proper sized Phillips screwdriver. **IMPORTANT:** Avoid over tightening to prevent damage to the plastic taillight assembly or lens.
7. Repeat **Steps 1 - 6** for other side of the vehicle and check that the two guards are parallel to each other.

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Product.

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.